

DIGIcontrol-3000 V7.0

The new DIGIcontrol-3000 V7.0 is a major software release packed with incredible new features and innovations. In addition to many comfort improvements, the new software version contains a large number of functional extensions for access control, alarm, lighting and HVAC control. In addition, it supports beside the new AIDApoint controllers over 20 new hardware devices. A main goal was also to make configuration and handling even more user friendly.

The software release comes with a mandatory firmware update for all actual floorcontrollers and will work with FW versions greater than 0406z90.

Just after finishing V7.0 we are working already on a lot of smaller changes, which will be released during the year and on another major release V8.0 is planned for next year. The release update is free of charge for all new installations within a year and after that for all systems with actual update point licence. There is no restriction in runtime of a release without an update. Please notice, customer requested SW modifications can only be done on the actual SW release.

Find a list of all the major function extension and improvements below.

Graphic Realtime Overview:

- Configuration for room / neighbour room structure
- Facility management functions
- Light control showing "manual duration time"
- Improved menu structure and I/O naming
- Manual regulation setpoint dialog
- Tool tip on access points with "from to area"
- 40-character area name
- Diagnostic graphic device display

Reports & Listings:

- Extended "Roll call listing" with last In & Out
- Advanced analogue value reports with new structured I/O selection & filters
- Average, minimum & maximum calculation filter for selected report interval
- Extended graphic view functions with titles

System Setup:

- Global setup "Supervisor Page"
- Advanced password management
- Sensor error handling

Building & Security System

Device configuration:

- Fast reader & door configuration in one go
- Reader: Support for mobile ID and BLE tokens
- Reader: Support for licence plate cameras
- Reader: Support for face recognition cameras
- Easy create device selection with explanations
- Auto device type selection from serial number
- Auto verification of serial number & device type
- Full support of more than 20 new devices
- Light scene functions for all light input devices

Floorcontroller:

- Type depending floorcontroller configuration
- Advanced floorcontroller battery set up
- Automatic battery test function times
- Start function for battery test
- Fuse on, off & reset for each bus line
- Room assignment for different functions
- New light scene function for easy light control
- Advanced HW routing option with easy config.
- More HW routing commands for NVR & Light
- Notes text field for all regulation types
- New structured I/O selection for all In- & Outputs
- Output names in all regulation types
- Markers for named outputs & activate reports
- ANC: Analog & binary programmable logic
- ANC: Download save variables
- Advanced energy management configuration

Floorcontroller Firmware:

- Face recognition camera support
- LPR support with gate open & close on authorized direction
- Red/green gate lamps with warning
- Battery check and reports set-up
- Key-buzzer for DT350B
- FC380xx Fuse control from Host
- Light Scenes control for rooms
- SDcard support on FC3xxxA & DT350 for offline saving up to 16.000.000 records
- Reporting of analogue input errors
- ANC: Download save analogue & binary logic
- Filter for short analogue error messages
- Reporting of remote alarm commands
- DT350 dialog texts loadable in special commands
- DT350 T&A Icons and alarm pictures on SDcard

The information in this document corresponds to the status of the publication (30-03-2021) and is subject to change at any time